


Part Description	Drawing No.	<b>MSO 1250</b>		<b>MSO 1500</b>		<b>MSO 2000</b>		<b>MSO 2500</b>	
		Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.
Central Shovel	TAV2.3	8	S3A	8	S3A	12	S3A	12	S3A
Lower Lateral Shovel	TAV2.18	4	S18A	4	S18A	4	S18A	4	S18A
Right Lateral Upper Shovel	TAV2.19	2	S19A	2	S19A	2	S19A	2	S19A
Left Lateral Upper Shovel	TAV.22	2	S22A	2	S22A	2	S22A	2	S22A
Wear Plate	TAV1.11	84	S11A	84	S11A	108	S11A	108	S11A
Central Arm	TAV2.2	8	S2A	8	S2A	12	S2A	12	S2A
Right Lateral Arm	TAV2.17	2	S17A	2	S17A	2	S17A	2	S17A
Left Lateral Arm	TAV2.20	2	S20A	2	S20A	2	S20A	2	S20A
Arm Cap	TAV2.8	12	S8A	12	S8A	16	S8A	16	S8A
Cleaning Ring	TAV2.27		S27A		S27A		S27A		S27A
Spacer	TAV2.26	9	S26A	9	S26A	13	S26A	13	S26B

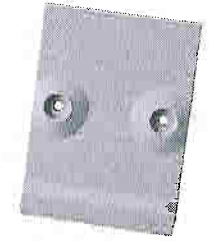

Part Description	Drawing No.	<b>MSO 3000</b>		<b>MSO 3700</b>		<b>MSO 4500</b>		<b>MSO 6000</b>	
		Qty.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.	Part No.
Central Shovel	TAV2.3	12	S3B	10	S3C	12	S3C	12	S3D
Lower Lateral Shovel	TAV2.18	4	S18A	4	S18B	4	S18B	4	S18B
Right Lateral Upper Shovel	TAV2.19	2	S19B	2	S19C	2	S19C	2	S19D
Left Lateral Upper Shovel	TAV.22	2	S22B	2	S22C	2	S22C	2	S22D
Wear Plate	TAV1.11	72	S11B	126	S11C	154	S11C	98	S11D
Central Arm	TAV2.2	12	S2A	10	S2B	12	S2B	12	S2B
Right Lateral Arm	TAV2.17	2	S17A	2	S17B	2	S17B	2	S17B
Left Lateral Arm	TAV2.20	2	S20A	2	S20B	2	S20B	2	S20B
Arm Cap	TAV2.8	16	S8A	14	S8B	16	S8B	16	S8B
Cleaning Ring	TAV2.27		S27A		S27B	12	S27B	12	S27B
Spacer	TAV2.26	13	S26B	11	S26C	13	S26D	13	S26D

